



Please read this document carefully before using this product. The guarantee will be invalidated if the device is damaged by not following instructions detailed in the manual. The company shall not be responsible for any damage or losses however caused, which may be experienced as a result of the installation or use of this product.

ENDA EI141 PROGRAMMABLE INDICATOR

Thank you for choosing ENDA EI141 indicator.

- * 35x77mm sized.
- * 4 digits display.
- * Easy to use by front panel keypad.
- * Display scale can be adjusted between -1999 and 4000.
- * Decimal point can be adjusted between 1. and 3. digits.
- * Measurement unit can be displayed.
- * Selectable four different standard input types (0-20mA, 4-20mA, 0-1V, 0-10V)
- * User can calibrate the device according to his/her own specified input type.
- * Sampling time can be adjusted in four steps.
- * Maximum and minimum measurement values are registered.
- * The maximum or the minimum values can be hold on the display.
- * Current and voltage calibration can be made..
- * Parameter access protection on 3 levels.
- * Easy connection by removable screw terminal.
- * CE marked according to European Norms.

CE **R_oHS**
Compliant



Order Code : EI141-□□□□□□

1

Supply Voltage
230VAC...230V AC
24VAC.....24V AC
12VAC.....12V AC
SM.....9-30V DC /7-24V AC

TECHNICAL SPECIFICATIONS

ENVIRONMENTAL CONDITIONS	
Ambient/storage temperature	0 ... +50°C/-25 ... +70°C (with no icing)
Max. relative humidity	80% up to 31°C decreasing linearly 50% at 40°C.
Rated pollution degree	According to EN 60529 Front panel : IP65 Rear panel : IP20
Height	Max. 2000m

Do not use the device in locations subject to corrosive and flammable gases.

ELECTRICAL CHARACTERISTICS	
Supply	230V AC +10% -20% or 12/24V AC ±10%, 50/60Hz or optional 9-30V DC / 7-24V AC ±10% SMPS.
Power consumption	Max. 7VA
Wiring	2.5mm ² screw-terminal connections
Date retention	EEPROM (Min. 10 years)
EMC	EN 61326-1: 1997, A1: 1998, A2: 2001 (Performance criterion B for the EMC standard)
Safety requirements	EN 61010-1: 2001 (pollution degree 2, overvoltage category II, measurement category I) EI141 must not be used in location where measurement category is II, III or IV.


Input type	Measurement range		Measurement accuracy	Input empedance
	Min.	Max.		
0-1V DC voltage	0V	1.1V	±0,5% (of full scale)	Approx. 11k (terminal voltage limits: min. = -2V, max. = 30V)
0-10V DC voltage	0V	14V	±0,5% (of full scale)	Approx. 11k (terminal voltage limits: min. = -2V, max. = 30V)
0-20mA DC current	0mA	25mA	±0,5% (of full scale)	Approx. 5 (applicable terminal voltage is max. 50mA.)
4-20mA DC current	0mA	25mA	±0,5% (of full scale)	Approx. 5 (applicable terminal voltage is max. 50mA.)

In the current measurement mode input impedance is 5 Ω. Therefore, in the current measurement mode, a voltage input should not be connected to the input terminals. Otherwise, the device will be broken down. To change the input type from voltage to a current measurement mode while the device is operating, first, leave out the voltage inputs. Then, change input type to one of the current measurement modes.

HOUSING	
Housing type	Suitable for flush-panel mounting according to DIN 43 700.
Dimensions	W77xH35xD71mm
Weight	Approx. 250g (after packing)
Enclosure material	Self extinguishing plastics

While cleaning the device, solvents (thinner, benzine, acid etc.) or corrosive materials must not be used.

TERMS

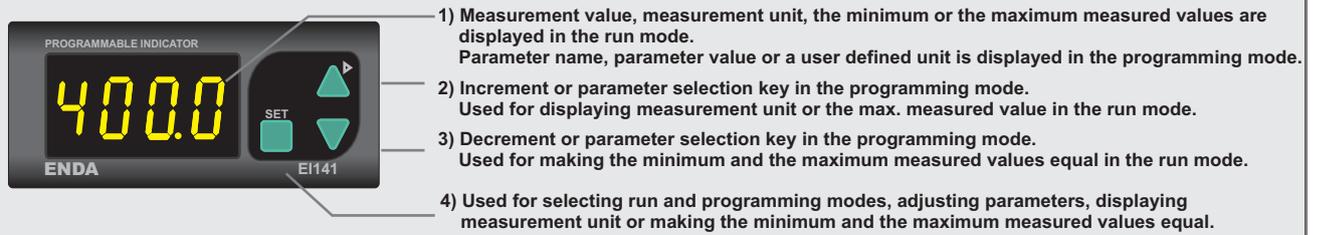



(1) Digital display	4 digits 7 segment yellow LED display
Character height	12.5mm
(2),(3),(4),(5) Keypad	Micro switch

DIMENSIONS



For removing mounting clamps:

- Push up the flush-mounting clamp in direction 1 as shown in the figure above.
- Then, pull out the clamp in direction 2.


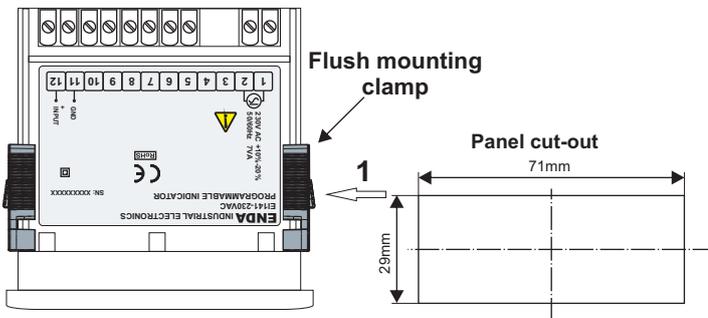
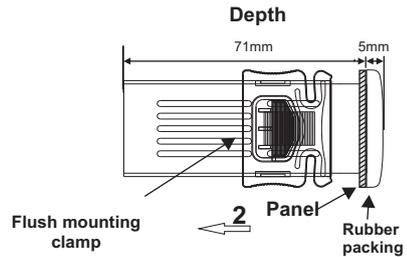


- Note : 1) Panel thickness should be maximum 7 mm.
 2) If there is no 60mm free space at the back side of the device, it would be difficult to remove it from the panel.



CONNECTION DIAGRAM



ENDA EI141 is intended for installation in control panels. Make sure that the device is used only for intended purpose. The shielding must be grounded on the instrument side. During an installation, all of the cables that are connected to the device must be free of electrical power. The device must be protected against inadmissible humidity, vibrations, severe soiling and make sure that the operation temperature is not exceeded. All input and output lines that are not connected to the supply network must be laid out as shielded and twisted cables. These cables should not be close to the power cables or components. The installation and electrical connections must be carried out by a qualified staff and must be according to the relevant locally applicable regulations.

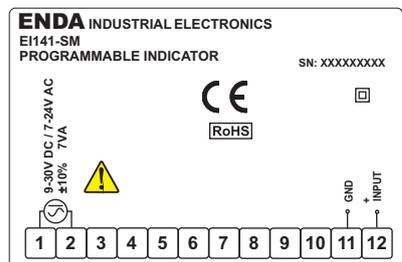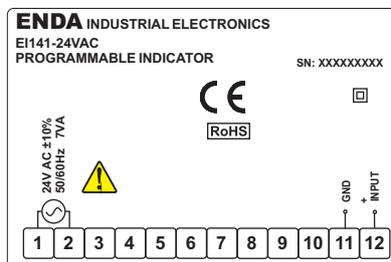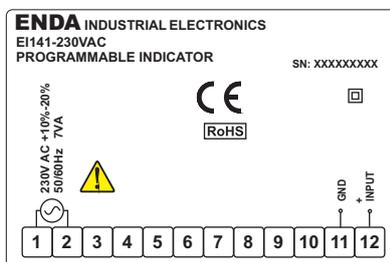


NOTE :
SUPPLY :

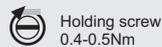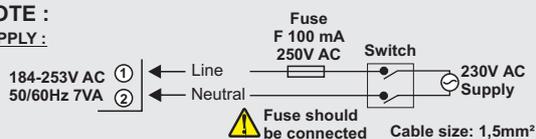


- Note : 1) Mains supply cords shall meet the requirements of IEC 60227 or IEC 60245.
 2) In accordance with the safety regulations, the power supply switch shall bring the identification of the relevant instrument and it should be easily accessible by the operator.

Running Mode

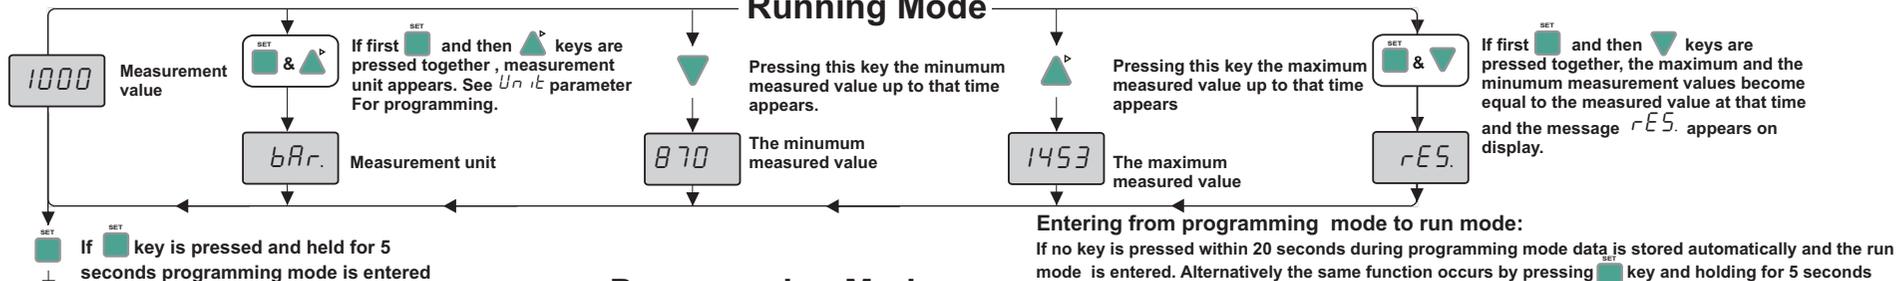

Programming Mode

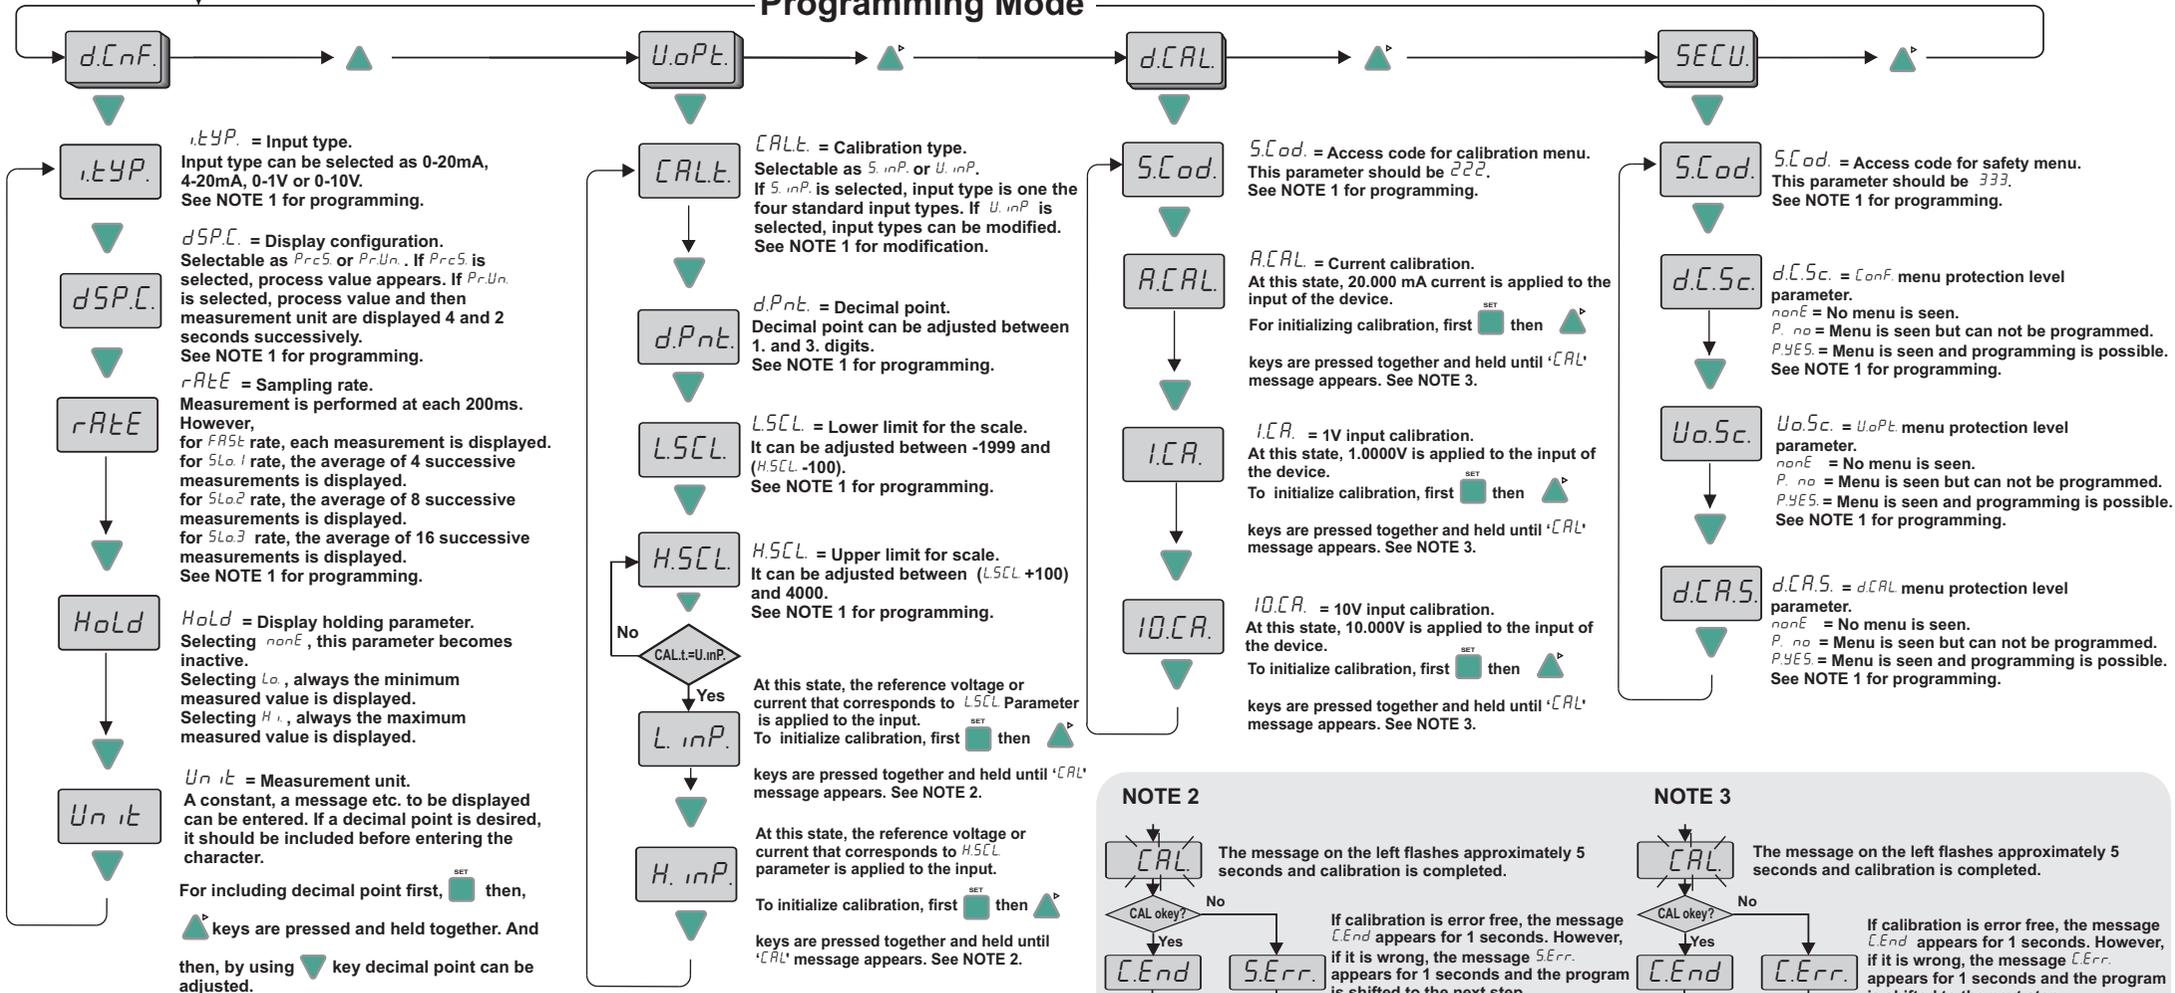


Parameter adjustment method


NOTE 1

For adjusting a selected parameter first press and hold **SET** key. Then, by using **▼** **▲** keys adjustment can be made. If increment key **▲** is pressed and held 0.6 seconds, the value of the selected parameter changes rapidly. If waited enough, the value increases 100 at each step. After 1 second following the release of the key, initial condition is returned. The same procedure is valid for the decrement key.

NOTE 2

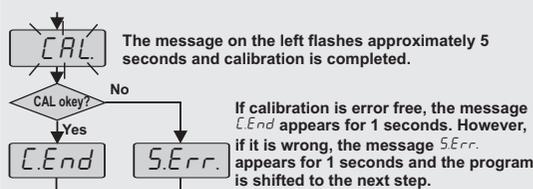

NOTE 3

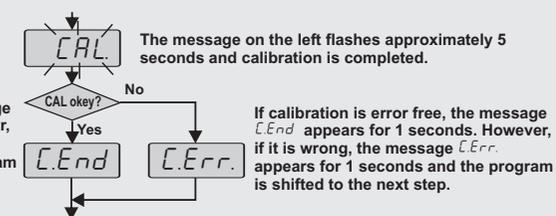

ERROR MESSAGES

S.Err. If the difference between the reference voltages or currents applied for the calibration of *H.inP.* and *L.inP.* is lower than one half of the full scale, this error message appears on the display. For example: Assume that the selected input type is 0-1V. In this case, if the difference between the reference voltages applied for calibration of *H.inP.* and *L.inP.* is lower than 0.5V, this error message appears.

C.Err. If the reference voltage or current applied to the input for calibration is too high or too low, this error message appears.